

LOADING REELS ONTO TRUCK: INSTRUCTIONS AND RULES

This is a guideline for loading reels onto a truck properly to prevent damage to the reels.

EQUIPMENT AND MATERIALS REQUIRED

1. Chocks
2. Chains
3. Nails
4. Hammer

PLACING REELS

Nail the chocks to the deck in front and behind the reels.


SECURING THE LOAD

1. Thread two chains through the eye of each reel.
2. Pull one chain to the front of the reel and the other chain to the back of the reel.
3. Repeat this process for each row of reels.




LOADING REELS ONTO TRUCK: INSTRUCTIONS AND RULES


LOADING

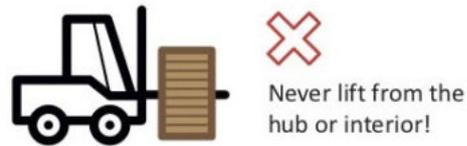

Do not lay the reel flat during loading or transportation.

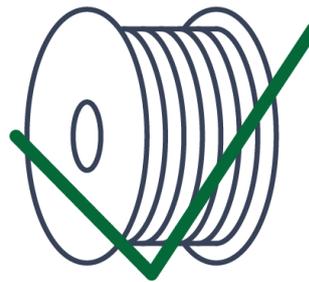

When arranging multiple reels of the same size, ensure that the flanges of each reel face each other. Compressing the cable between adjacent reels may cause damage.

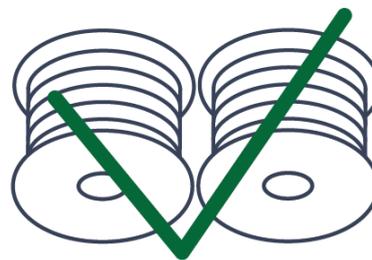

Avoid placing anything on top of the reel.

Prepared by: 
Dmitry Gibert, Quality Manager

Approved by: 
Mike Riddle, President